


Vibe Motion Chair

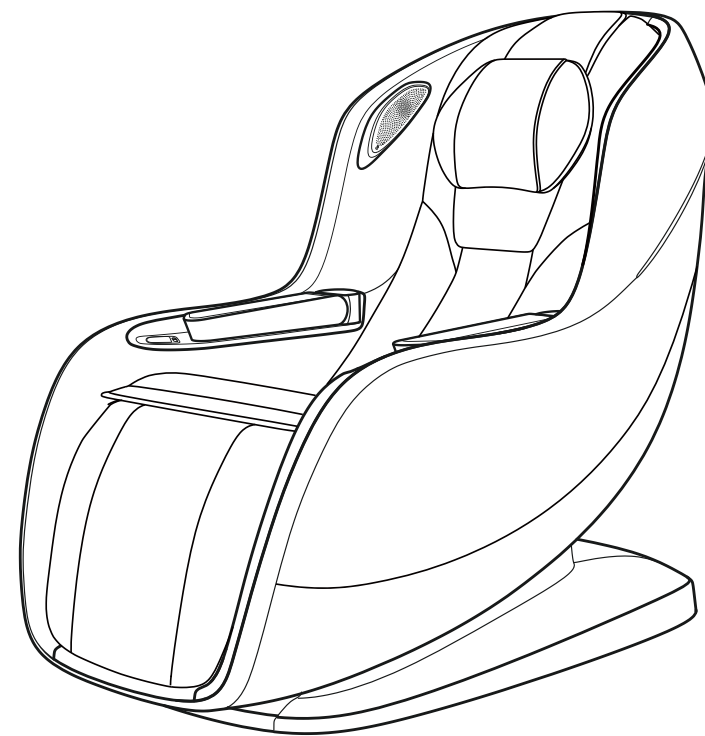

Manual

(Please read the manual carefully before use the machine)

Product Maintenance



Cleaning

Do not use steel wool, abrasive cleaners, or corrosive liquids (such as gasoline or acetone) to clean the product.

- 1. Unplug the chair from the power outlet.
- 2. Clean the massage chair, control buttons, and power cord with a dry cloth.
- 3. Do not use a wet cloth or detergent.

Storage

- 1. Unplug the chair from the power outlet.
- 2. Store the product in a cool and dry place away from direct sunlight.
- 3. Do not place heavy objects on top of the product.

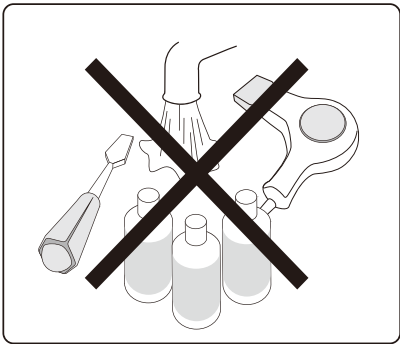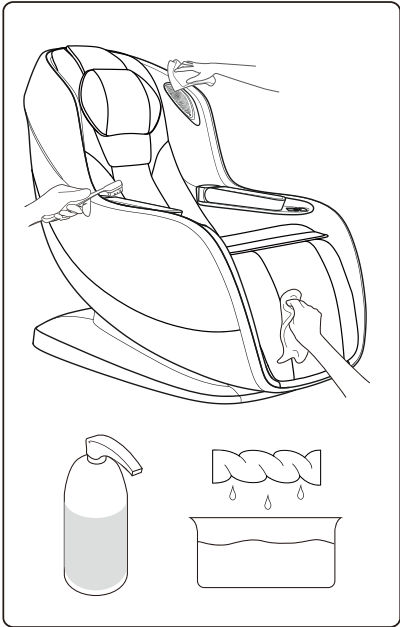

Contents

Thank you for choosing this massage chair. Please read this instruction manual carefully before use, especially the section on safety precautions, to ensure the correct use of this massage chair. After reading, please keep this instruction manual properly for future reference.

Safety Instructions	2-5
Product Specifications	6
Product Structure	7-8
Preparation before Use	9-11
Remote Controller Instructions	12
Operation Instructions	13-14
Abnormal Situations	15
Product Maintenance	16

Safety Instructions

Warning!

Please read all instructions before use.

This massage chair must be used with a socket that matches the plug. Incorrect grounding may result in electric shock. Do not modify the plug and socket on your own. Always have them checked by professional technicians. When using electrical appliances, follow basic safety precautions to reduce the risk of electric shock, burns, fire, or injury, including the following:

1. Use a socket that matches the plug.
2. Make sure the plug is fully inserted into the socket to reduce the risk of short circuit or fire.
3. Unplug the chair promptly after use or before cleaning.
4. Do not use this product in high humidity conditions.
5. Do not store or use this product outdoors or in direct sunlight.
6. If there is a sudden power outage during use, immediately switch the power button to the "O" position and unplug the chair to avoid damage when the power is restored.
7. Do not operate the massage chair if the power cord is wet or damaged.
8. Do not insert or unplug the plug with wet hands to avoid accidents.
9. When children, disabled individuals, or people with limited mobility are near or using the massage chair, there must be someone present to supervise.
10. Only use this product for the purposes described in this manual.
11. Do not use accessories not provided by the supplier.
12. Do not attempt to sit on the armrest or backrest, as it may cause the massage chair to tilt and result in accidents.
13. Do not fall asleep during the massage.
14. Keep the massage chair clean regularly and avoid inserting other objects into the gaps of the chair.
15. Do not move the massage chair by pulling the power cord directly.
16. Before each use, check for any abnormal cracks in the fabric of the chair back. If any abnormalities are found, do not use the chair and contact the supplier's after-sales service center promptly.
17. This product is designed for home use only.
18. If you are unsure whether you can use the massage chair, consult a physician.

Abnormal Situations

In case of abnormal situations, stop using the chair and unplug the power cord to prevent accidents. If the following methods do not solve the problem, pls contact after-sales service center.

Possible Abnormal Situations	Solutions
Noise during operation	Normal noise caused by design, does not affect the normal use of the machine.
Power connected but chair cannot operate	1. Check if the power plug is properly inserted and if there is power supply. 2. Check if the power button is on "I" position.
Controller operates but chair cannot operate	If the temperature of the massage chair becomes too high after prolonged operation, it will enter the temperature protection mode automatically. Please turn off the power and let the machine cool down for 30 to 50 minutes.
Controller and chair stop operating	After the automatic timing function is activated, press any key to regain control when the set time has elapsed.
Chair moves or shakes	Check if the floor is level and if the foot pads are all on floor.


Operating Instructions

3. Instructions for Bluetooth Music Playback


- a. Pairing: Activate the Bluetooth on your phone, iPad, or other devices, when you see "VM425", pair it with the massage chair's Bluetooth.
- b. Playing Music: After pairing, control the music playback using the music player software on your phone, iPad, or other devices.

Note: Please disconnect the Bluetooth connection when not in use.

4. Ending the Massage

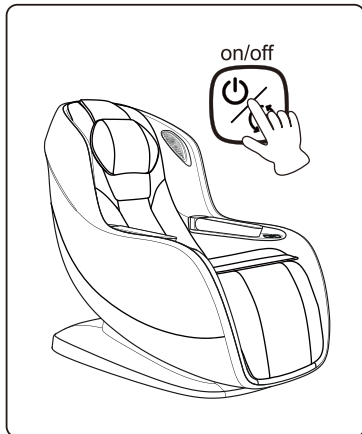

- 1) Long-press the power button for 2 seconds to turn the chair on/off.

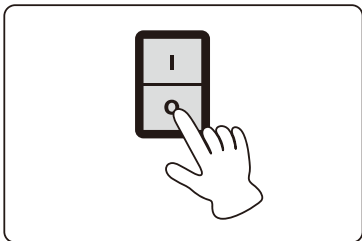

- 2) Make sure to set the power switch to "O."

- 3) Unplug the power cord.

* Do not twist or bend the power cord to prevent it from breaking.

Safety Instructions

19. To avoid discomfort or injury caused by using this massage chair, the following individuals should consult a physician before using this product:

*Individuals with malignant tumors

*Individuals with heart disease

*Pregnant women, postpartum women, or individuals during menstruation

*Individuals in need rest

*Individuals undergoing treatment

*Individuals with tenosynovitis

*Individuals receiving anticoagulant therapy

*Individuals with injuries in the treatment area

*Individuals with a body temperature above 38 °C (fever)

*Individuals with back problems, abnormal or twisted cervical spine

*Individuals with peripheral circulation disorders causing sensory impairment, such as diabetes

20. If you experience pain during use, stop using immediately. If you are injured during use, seek medical attention promptly.

21. Do not massage on red or inflamed skin.

22. This product is designed to provide comfortable massage enjoyment for home use and is not a substitute for professional treatment.

23. It is recommended to use the massage chair for 30 minutes per day, and massage the same area for no more than 15 minutes. Excessive massage can have a counterproductive effect and prolonged use may cause the massage chair to overheat and shorten the product's lifespan.

24. Do not use this product in environments with gas jets or oxygen supply.

25. This product is not suitable for children under 18 years old.

Precautions during Use

1. Do not insert fingers or other objects into the gaps in the middle cover or base.

2. It is recommended that children and elderly people with limited mobility use the chair under adult supervision.

3. Stop using if you feel any abnormality or pain during use.

Safety Instructions

4. This product is for single-person use only. Do not use by two or more people simultaneously.
5. Do not use this product within half an hour after meals.
6. Do not use after drinking alcohol.
7. Do not stand or let pets play around the massage chair during use.
8. Be careful when resetting the armrest to avoid pinching fingers.

Warning:

*This product should not be used by individuals with physical, sensory, or mental impairments, or those lacking experience or knowledge of the product.

*Unless they have been supervised or instructed on its use by a responsible person for their safety.

*Children should be supervised to ensure they do not play with the massage chair.

*If the power cord is damaged, it must be replaced with a special cord or a special component obtained from the manufacturer or repair department.

*The surface of the appliance may become hot. Heat-insensitive individuals should use it with caution.

*The maximum weight capacity of this product is 90kg. Exceeding the maximum weight capacity may affect the performance of the product.

Prohibited:

1. It is prohibited to disassemble, dismantle, or modify this product without authorization to avoid electric shock or machine failure. Any issues, please contact the manufacturer or local dealer promptly.
2. Do not move the machine while it is operating to avoid clipping your finger.

Immediately stop using the product and turn off the power, unplug the power cord if the following situations occur:

1. Sudden thunderstorms or power outages.
2. Accidentally splashing water or other liquids on the product, damage to related accessories, or unusual noises from the interior.

Operating Instructions

2.Key Function Description



Power Button:

Long-press for 2 seconds to turn the chair on/off, press once to pause/start.



Heating Button:

Heating sequence:
waist and leg heating → waist heating → leg heating → off.



Auto Function Button:

Press once to activate an automatic program. The massage chair offers 6 automatic massage programs for different needs:

- | | |
|-----------------------|----------------------|
| 1. Shoulder and Neck. | 2. Quick Relief |
| 3. Office PRO | 4. Gentle Relaxation |
| 5. Tui Na | 6. Power Boost |



Negative Ion Button:

Press once to turn on, press again to turn off the function.



Manual Function Button:

Press once to activate a massage technique. The massage chair offers 6 massage techniques for different needs:

- | | |
|-------------|-------------|
| 1. Kneading | 2. Pinching |
| 3. Rolling | 4. Tapping |
| 5. Patting | 6. Shiatsu |



Backrest Down Button:

Long-press to lower the backrest.



Backrest Up Button:

Long-press to raise the backrest.



Vibration Mode Button:

Press once to active the vibration program:

- | | |
|--------------------------|----------------------|
| 1. Intestinal Regulation | 2. Sweet Dreams |
| 3. Stress Relief | 4. Facial Relaxation |
| 5. Reflexology | 6. After Sport |



Shake Acceleration Button:

Press once for acceleration, up to five levels.




Shake Deceleration Button:

Press once for deceleration until turned off.

Remote Controller Instructions

1.Remote Control Function Zone: (Front side)

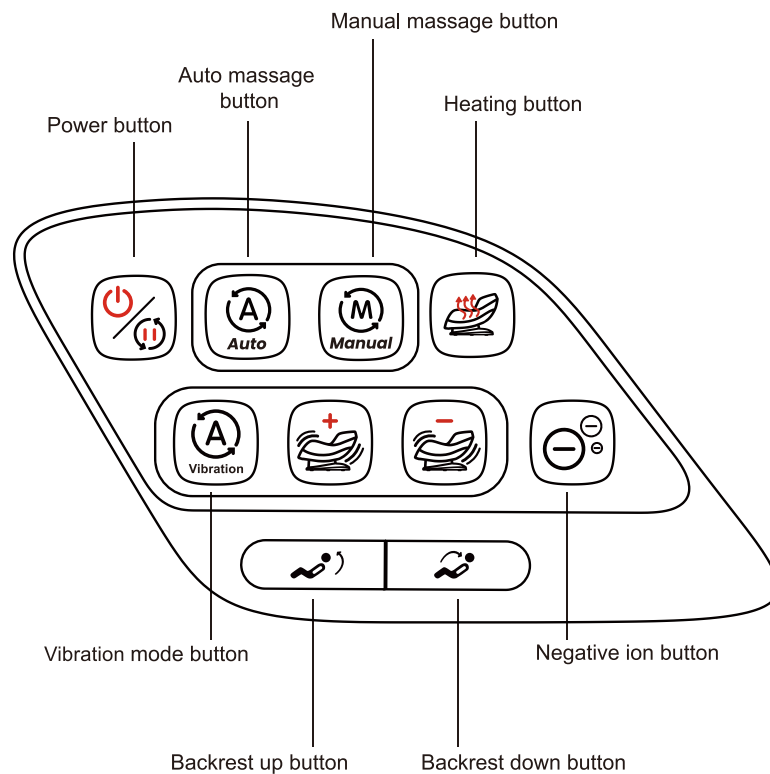

Safety Instructions


Not suitable for the following individuals:

- 1.Individuals undergoing medical treatment or experiencing physical discomfort should consult a doctor before using the product.
- 2.Children under 18 years old, pregnant women, women during menstruation, and individuals with malignant tumors.
- 3.Individuals over 55 years old, individuals with osteoporosis, heart disease, and high blood pressure.
- 4.Individuals with implanted electronic devices such as pacemakers.
- 5.Individuals with acute painful conditions such as sprains or muscle strains.
- 6.Not recommended for individuals who experience motion sickness.

Control with your phone

Control via Bluetooth on your phone to select programs and techniques for a full massage experience.

Download the app from below:




Product Specifications

Item Name	Specification Description
Product Name	Vibe Motion Chair
Product Model	VM425
Rated Voltage	220V~
Rated Frequency	50/60Hz
Rated Power	150W
Rated Time	15 minutes
Adjustable Time	5-30 minutes (via app)
Product Dimensions	Upright position: 1230*700*1100(mm)
	Reclined position: 1540*700*790(mm)
Product Load	90kg
Product Net Weight	90kg
Product Packaging Dimensions	1615*765*865mm
Product Origin	China
Compliance Standards:	GB4706.1-2005
	GB4706.10-2008
Operating Environment:	Temperature: 0°C~35°C
	Humidity: 20% ~ 80% RH
Storage Environment:	Temperature: -20°C ~ 35°C
	Humidity: 20%~80% RH
USB Parameters	Maximum Output: 5V=2A
Wireless Charging Power	Maximum Power: 5W
Safety Design	Class I


Preparation before Use

When a person lies on this massage chair, the backrest can be adjusted to a reclined position. When the backrest is reclined to the lowest position, it is recommended to maintain a safe distance of 40cm from the back of the massage chair. It is recommended to place a shock-absorbing and non-slip pad under the chair.

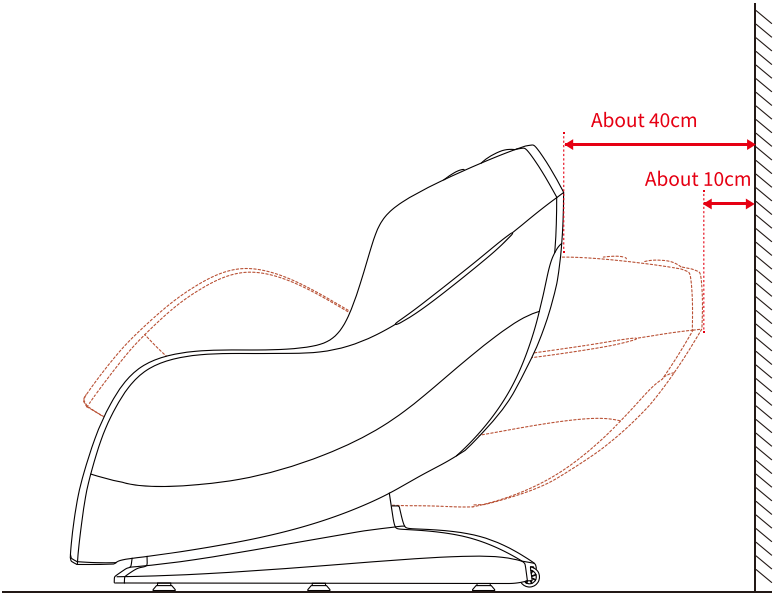

Preparation before Use


(3) Armrest Reset

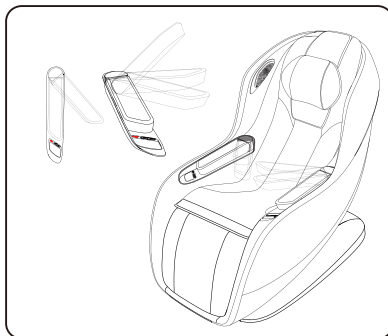

Armrest Usage Precautions

1. Use the armrest in the reset position to ensure that the armrest is in the initial position.
2. When resetting the armrest, lift it gently and lower it carefully to avoid pinching your hand.
3. Before getting up, adjust the armrest to the initial position to avoid getting up while lifting the armrest.
4. After use, reset the armrest to the initial position to ensure product safety.

(4) Move the massage chair

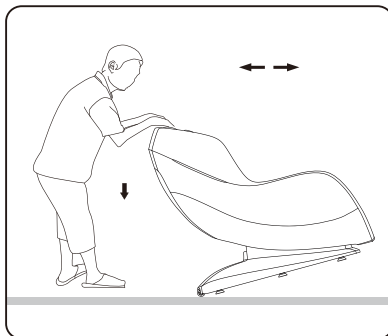


As shown in the left figure, press the backrest with both hands, reset the armrest to the initial position, and then push or pull the massage chair forward or backward to the desired position.

Note:


- * Do not move the massage chair while someone is lying on it.
- * Moving the massage chair may damage the floor, so it is recommended to use a mat underneath the chair.
- * To avoid dropping, be sure to hold the massage chair firmly when moving it.

Product Structure


※ The illustration is a schematic diagram. Different models have different shapes.

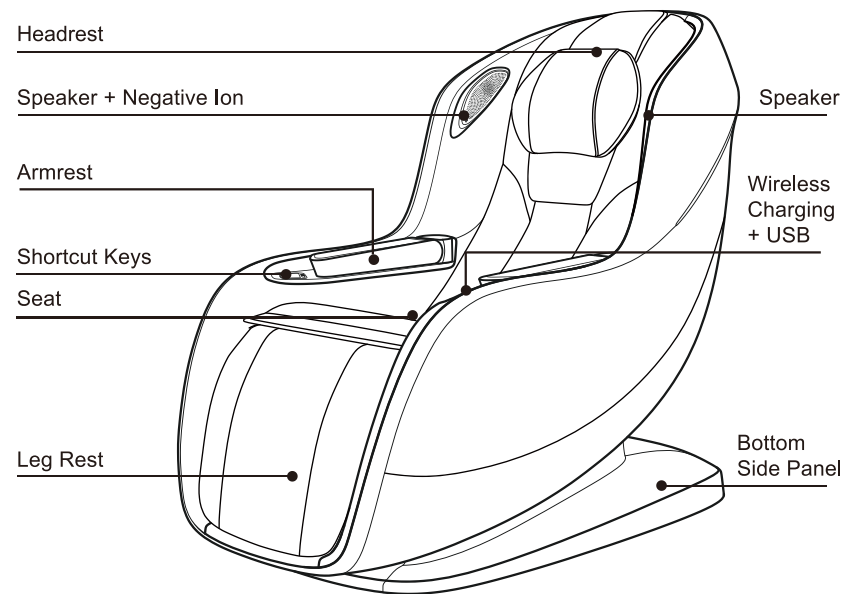


Armrest Function Description

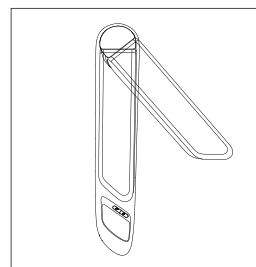

1. The armrest can rotate inward by 40°.

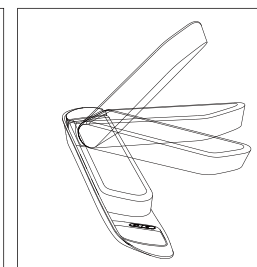


2. The armrest can be raised and adjusted to 3 positions, with a maximum angle of 60° (with a maximum load of 35kg when set above the first gear).

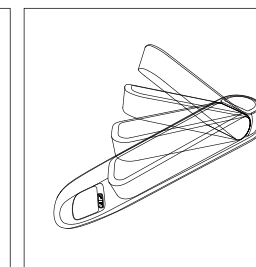

3. The armrest can be adjusted vertically and rotated inward (with a maximum load of 35kg when lifted at an angle or when raised).

Product Structure

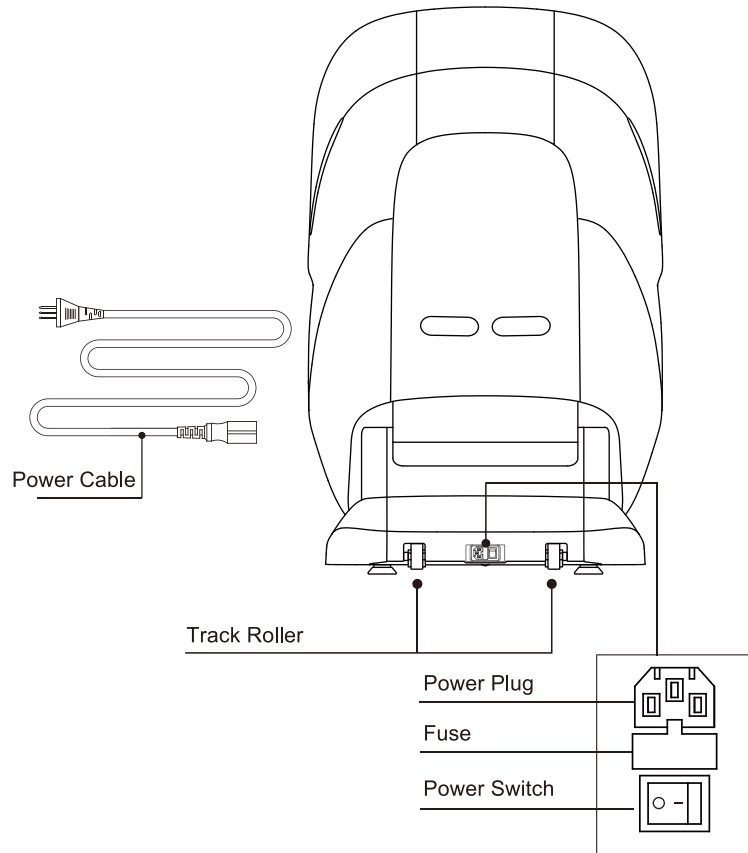

About Power Plug and Power Cord

Before use, please check if the voltage meets the product requirements.

Do not insert or remove the plug with wet hands to avoid electric shock.

When unplugging from the power outlet, grasp the plug firmly and pull it out.


Do not pull, bend, or twist the power cord.

When there is a power outage or during long periods of non-use, please turn off the power switch and unplug the power cord.

If the power cord is damaged, immediately stop using it, turn off the power switch, unplug the power cord, and contact a professional technician for repair.


Preparation before Use

(1) Unpacking and Taking Out the Accessories

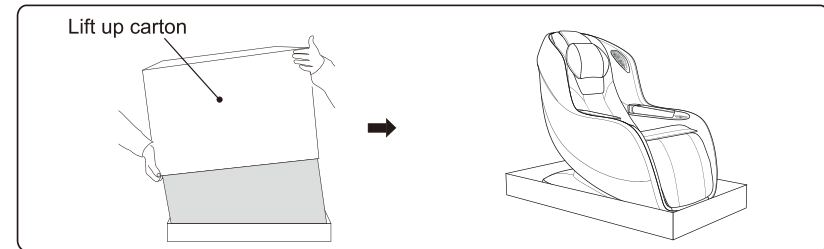


- 1.Remove the packaging tape from the massage chair's main box and lift the box to remove it.
- 2.Take out the accessories.

(2) Placing the Massage Chair

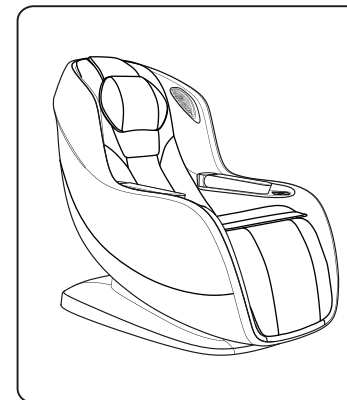

- * Lift the entire massage chair from the bottom plate box and place it in a suitable location.
- * Avoid placing it in direct sunlight or near heating appliances, as this may cause discoloration or hardening of the upholstery.
- * To prevent floor damage and reduce noise, place a cloth or similar material underneath the massage chair.
- * Make sure there are no obstacles in front of or behind the massage chair.
- * Avoid placing it in damp or uneven areas.
- * To avoid signal interference, keep it at least 1 meter away from TVs, radios, and other devices.

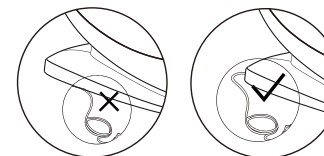

Note: Do not press the power cord under the massage chair's base, and do not roll over the power cord when moving the chair!